

FN-COMBINATIONS

Fn + 1	F1
Fn + 2	F2
Fn + 3	F3
Fn + 4	F4
Fn + 5	F5
Fn + 6	F6
Fn + 7	F7
Fn + 8	F8
Fn + 9	F9
Fn + 0	F10
Fn + -	F11
Fn + =	F12
Fn + E/J	Insert
Fn + [Volume-
Fn +]	Volume+
Fn + Y	Num *
Fn + U	7
Fn + I	8
Fn + O	9
Fn + P	Num +
Fn + H	Num .
Fn + J	4
FN + K	5
Fn + L	6
Fn + ;:	Num -
Fn + N	0
Fn + M	1
Fn + ,<	2
Fn + .>	3
Fn + /?	Num /

Fn + SPACE	Enter "FnLock" mode	Locks the Keyboard to Fn-Combinations. Press Fn to exit "FnLock" mode
Fn + \	call mute	
Fn + W	color switch	Switch colors (white, red, green, blue, yellow, purple, Cyan)
Fn + S	mode switch	Switch Light effect (16 presets)
Fn + A	light decrease	Ten levels of lighting brightness
Fn + D	light increase	
Fn + Esc		Press and hold Fn+Esc for 5 seconds to restore the keyboard to factory Settings
Fn + Tab	actuation adjust mode	see illustration below for more details

- Fn + Tab to enter actuation adjust mode
- Lit Keys are selected for adjusting in 20 levels.
The brighter the key the lower the actuation distance.
- Keys can be independently selected
- Fn to exit actuation adjust mode

