



Fn + Tab to enter actuation adjust mode

Lit Keys are selected for adjusting in 20 levels.

The brighter the key the lower the actuation distance.

Keys can be independently selected

Fn to exit actuation adjust mode